



How to use the steam oven


Controls

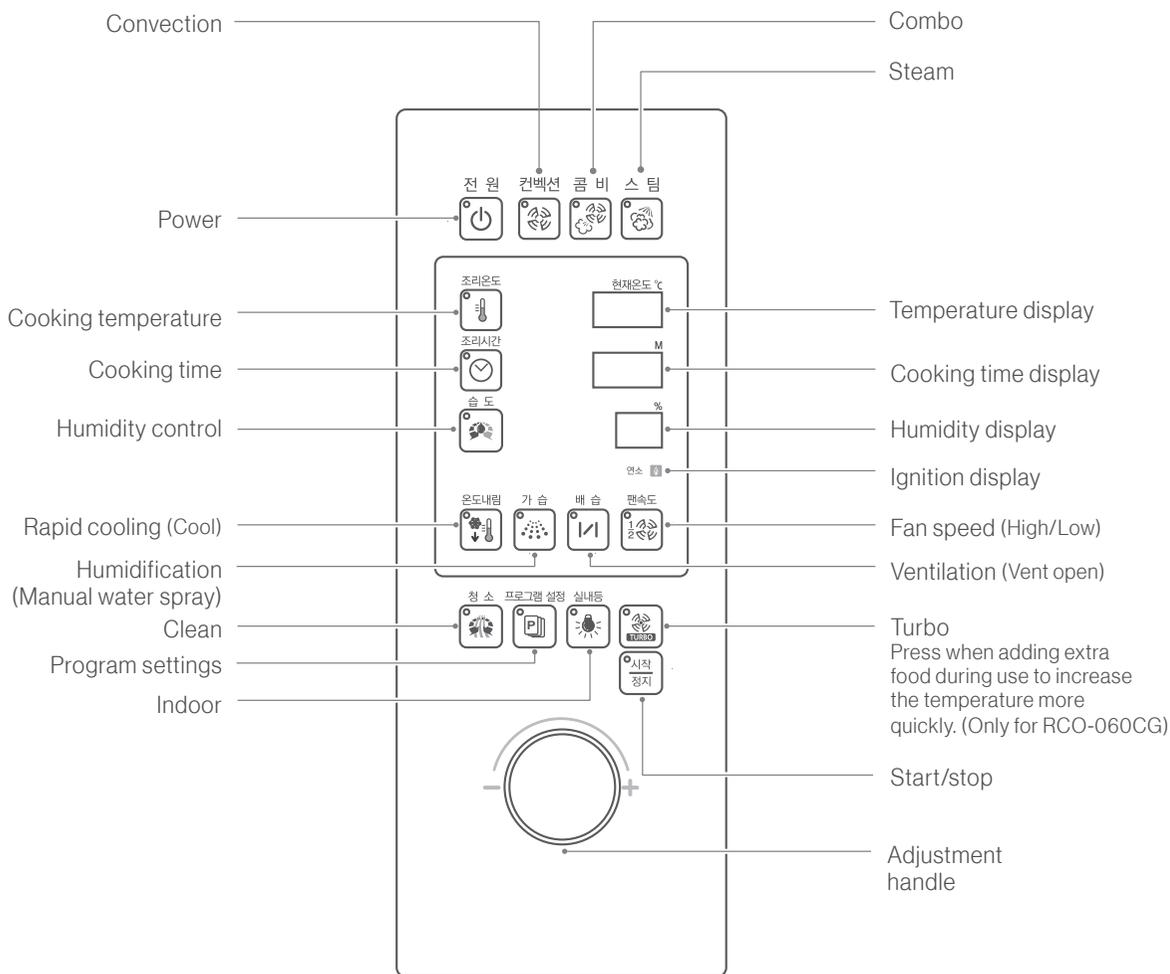

Cook (e.g.: Combo mode)

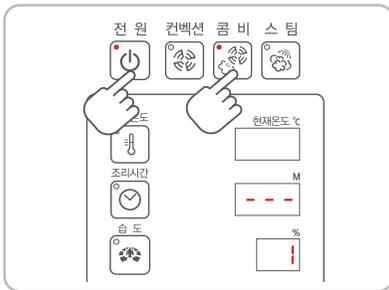


1. Turn on the power, then select combo mode.

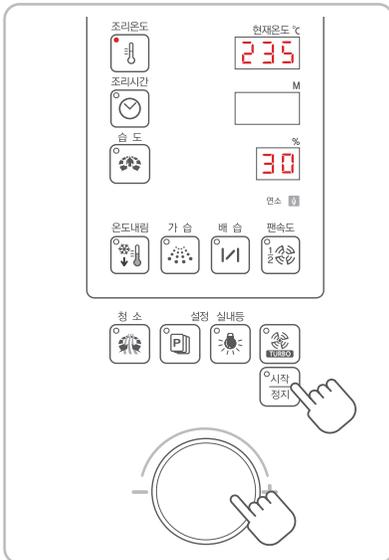

2. Turn the adjustment handle to set temperature and humidity, then press the [Start/Stop] button.

3. When the preheat temperature is reached, add the food.

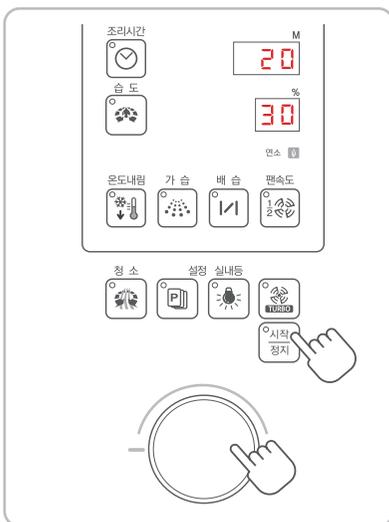


4. Turn the adjustment handle to set the time, then press the [Start/Stop] button to finish cooking.




Be careful not to be burned by heat or steam escaping with the oven door open during cooking.

Cleaning

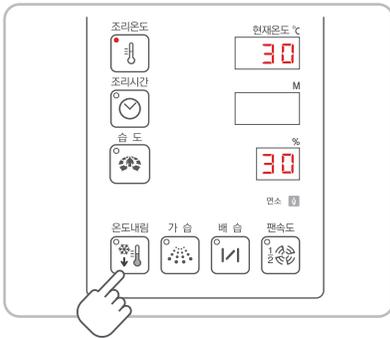


1. Press the [Cool] button with the oven door open and power on.


- If the current temperature drops below 50°C, rotation automatically stops.

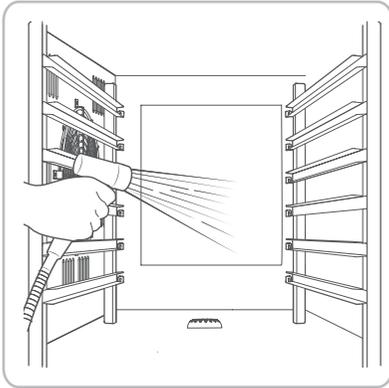

2. Check whether the current temperature is less than 50°C and spray water evenly inside the oven.

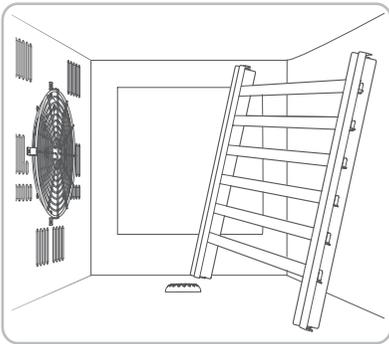


3. Separate the drawer and blower guide, then incline to the right (opposite direction of the convection fan).

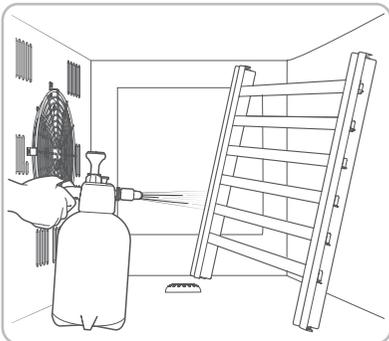

4. Use the detergent sprayer to spray detergent evenly inside the oven, then close the door.

Cleaning

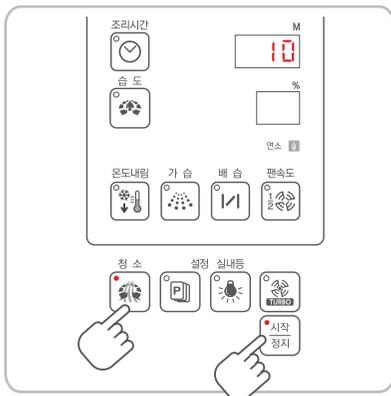


5. Press the [Clean] button to select a cleaning time.

- You can choose between 10 minute and 20 minute cleaning times.

6. Press the [Start/Stop] button to start cleaning.

- When cleaning is complete, a buzzer will sound.

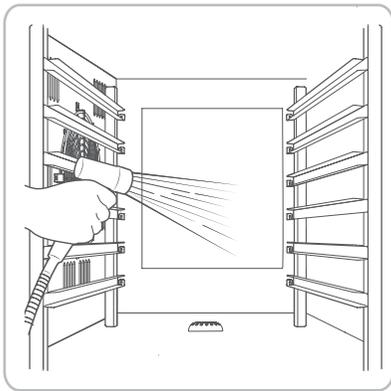

7. When the buzzer sounds, use the hand shower to clean the oven interior with water.



8. Reassemble the drawer and blower guide, then open the oven door to let it dry naturally or run convection at 95°C for 10 minutes.



9. Press the [Power] button to turn off the power.

 Use rubber gloves and a mask to ensure detergent doesn't come in direct contact with your skin.

Automatic detection control

Automatic detection control indicator	Contents	Actions
E10	If there is a difference of over 40°C between the set temperature and the actual temperature	<ul style="list-style-type: none">• Cool inside the oven by opening the door or spraying water.
E11	Spark error (for gas)	<ul style="list-style-type: none">• Check whether the gas valve is locked.
E56	Insufficient water pressure	<ul style="list-style-type: none">• Check whether the water valve is locked.• The water pressure may decrease if a lot of water is used.