



How to use the electric dishwasher

Controls

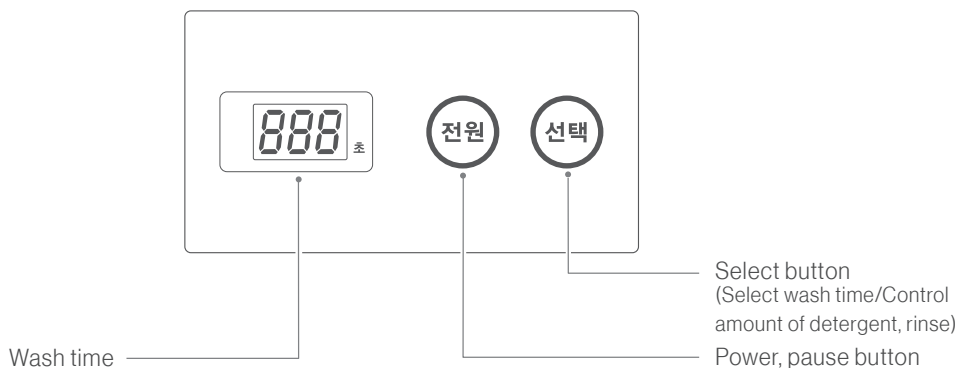

How to Wash

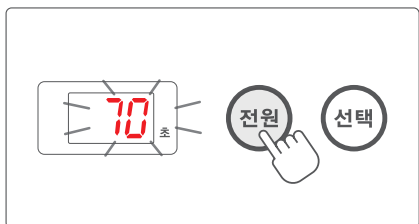

1. Press the [Power] button. The set wash time will flash on the display, and the dishwasher will automatically prepare.



2. When preparations are complete, there will be a sound, and the set wash time will flash on the display.




3. Press the [Select] button to set the wash time. After preparations are complete, press the Select .

- You can set a wash time of 70, 90, or 120 seconds.

Category	70 sec	90 sec	120 sec
Wash time	43 sec	65 sec	95 sec
Stop time	5 sec	5 sec	5 sec
Rinse time	12 sec	12 sec	12 sec
Dry time	10 sec	8 sec	8 sec

You can change between preparation and starting washing.

How to Wash

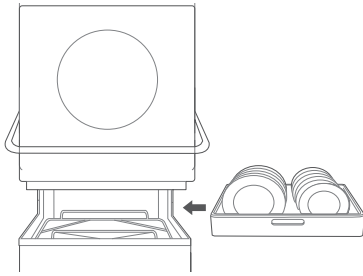


4. Open the dishwasher door and fill the rack with dishes.
5. Close the dishwasher door to automatically start washing, rinsing, and drying.




6. When washing is complete, a wash time of (0) shows on the display and there is a sound.

7. Open the dishwasher door and pull out the rack.

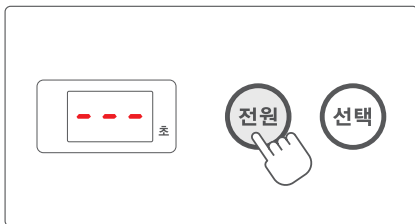


8. If you are finished using the dishwasher, press and hold the [Power] button for 3 seconds to turn off all lights and stop operation.

Accelerated detergent/rinse supply

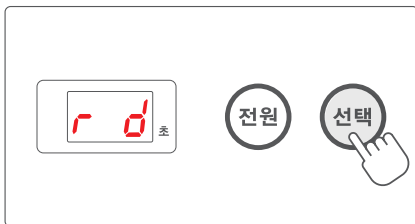



1. Press and hold the [Select] button for at least 3 seconds while the power is off (---), and (r d) is shown on the display.

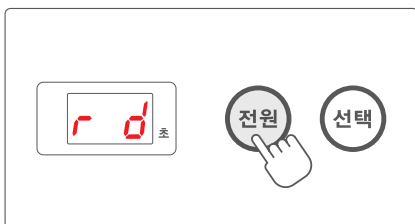

2. Press the [Power] button to more quickly supply detergent and rinse for 60 seconds.

- Press the [Power] button once more during accelerated supply to stop it.



Rinse quantity control

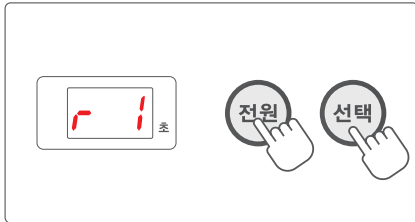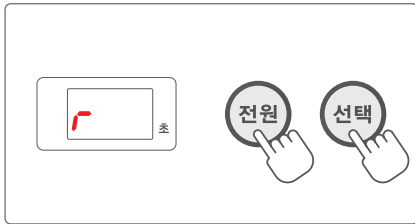

1. Press and hold the [Select] button for at least 3 seconds. Press the [Select] button once more (for less than 3 seconds) while (r d) is displayed to set rinse control, [r].
2. Press the [Power] button (for less than 3 seconds) to enter rinse.
3. Press the [Select] button to control the amount of rinse inserted from levels 1-12.
 - Select the amount of rinse you want to put in.
4. Press the [Power] button to confirm your selection control mode.

Rinse	r 1	r 2	r 3	r 4	r 5	r 6	r 7	r 8	r 9	r 10	r 11	r 12
	0sec	1sec	1.5sec	2sec	3sec	4sec	5sec	6sec	7sec	8sec	9sec	10sec

Detergent quantity control

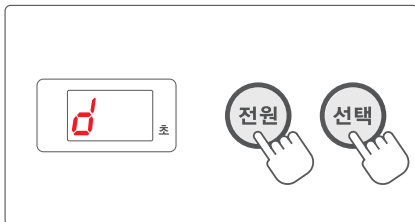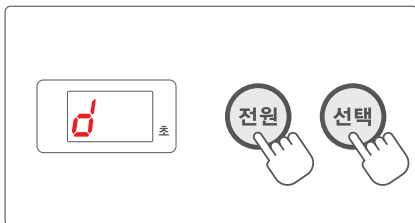

1. Press and hold the [Select] button for at least 3 seconds. Press the [Select] button twice more (for less than 3 seconds) with (r d) displayed to set detergent control, (d).
2. Press the [Power] button (for less than 3 seconds) to enter detergent control mode.
3. Press the [Select] button to control the amount of detergent inserted from levels 1-12.
 - Select the amount of detergent you want to put in.
4. Press the [Power] button to confirm your selection.

Detergent	r 1	r 2	r 3	r 4	r 5	r 6	r 7	r 8	r 9	r 10	r 11	r 12
	0 sec	6 sec	7 sec	10 sec	12 sec	14 sec	17 sec	18 sec	19 sec	22 sec	24 sec	30 sec

Automatic detection control

Automatic detection control indicator	Contents	Actions
E89	Wash water/rinse water frozen	<ul style="list-style-type: none"> The surrounding temperature is below 10°C and so the wash water or rinse water has frozen and the dishwasher will not operate. Please contact our service center.
E15	Wash water/rinse water overheated	<ul style="list-style-type: none"> Please contact our service center
E31	Rinse water thermistor disconnected or short-circuited	
E32	Wash water thermistor disconnected or short-circuited	
E44	Rinse water level detection problem	
E51	Power switch fault	
E26	Rinse water fill error	<ul style="list-style-type: none"> Check that the drainpipe in the water tank is correctly inserted. Check whether the tank water level detector is dirty or blocked. Check whether the water supply valve is locked, then open the valve and press the power button.
E42	Rinse water fill error	<ul style="list-style-type: none"> Check that water is supplied properly to the heater. If the issue is not resolved, please contact our service center.