 


# How to use the indoor thermostat

 
## Operation

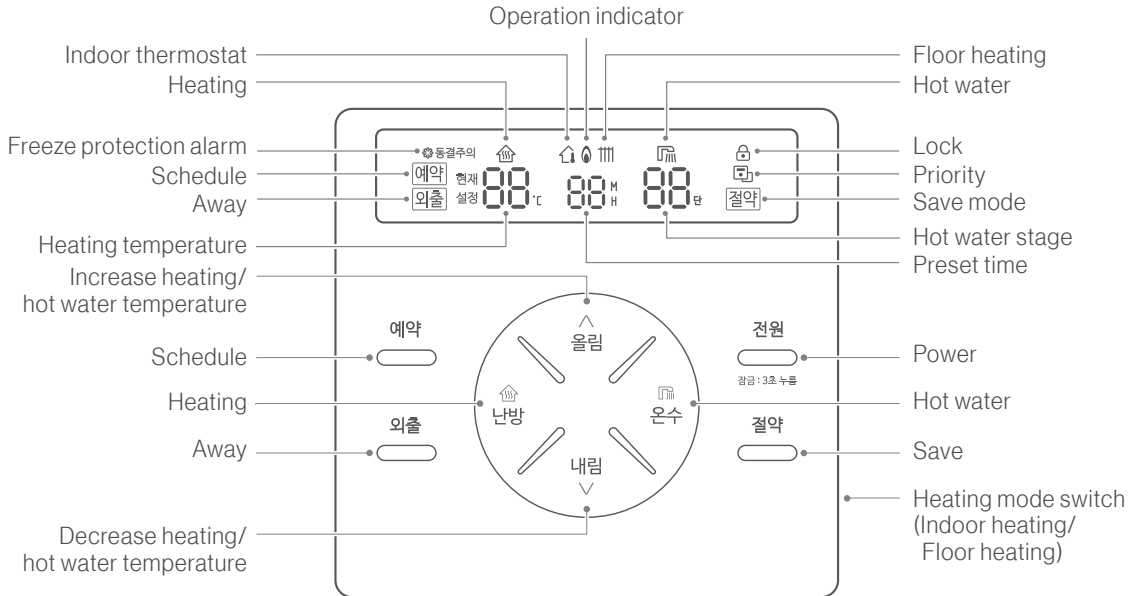

### • Heating Mode

[Indoor heating mode] or [floor heating mode] can be selected regarding the environment. Upon purchase, the default is the indoor heating mode ( ).

<p><b>Indoor heating mode</b> Indoor temperature sensor detects room temperature and controls the temperature.</p>	<p><b>Floor heating mode</b> Floor temperature sensor detects water temperature from a boiler and controls the floor temperature.</p>
--	---

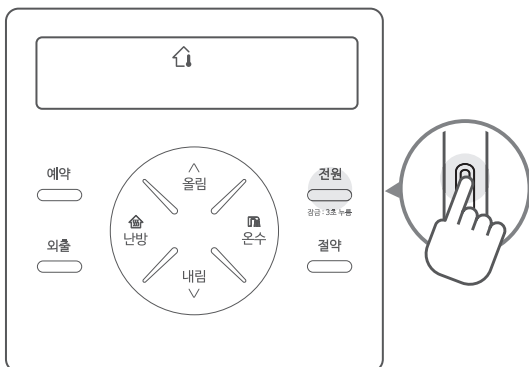


### 1. When power is on, press the [heating mode switch] button.

- ( ) Indoor heating mode ↔ ( ) Floor heating mode can be switched.

# Heating/Hot Water Function
 
## Heating

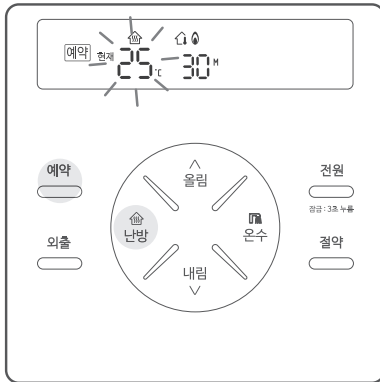


### 1. When power is on, press the [heating] button to turn on the heating system.

- If the heating button is pressed when the system is on, it will be turned off.

### 2. Set the desired temperature with the [up] and [down] buttons.

- If the current temperature is higher than the target temperature, the heating system will not be turned on.
 
## Hot water

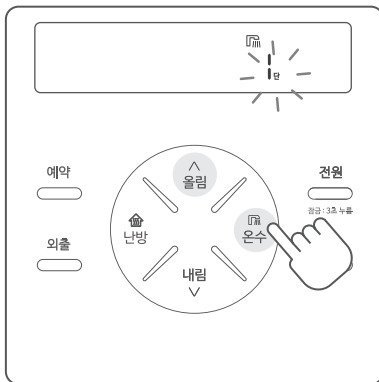

### 1. When power is on, press the [hot water] button to turn on the hot water system.

 
- When both of the heating and hot water systems are on, press the hot water button two times to turn off the hot water system.

### 2. Set the desired hot water stage with the [up] and [down] buttons.

- There are three stages from 1 to 3.


# Schedule/Away/Save Mode

## Schedule mode

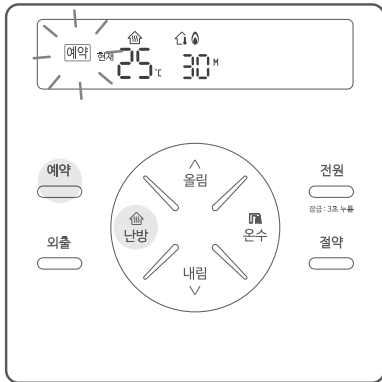


### 1. When power is on, press the [schedule] button to preset time.

 - ( [예약] ) will be displayed.




## Away mode

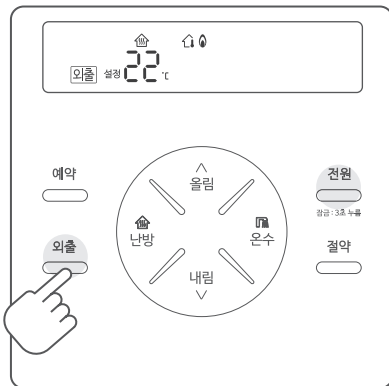

### 1. When power is on, press the [away] button to turn on the away mode.

- ( [외출] ) will be displayed.
- The minimum temperature heating system will be turned on every 4 hours to keep the pleasant room temperature.
- If the away or heating button is pressed when the mode is on, the away mode will be turned off.

 
## Save mode

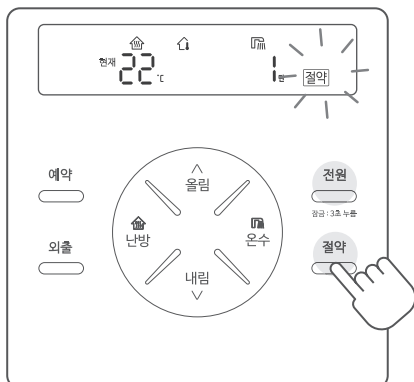

### 1. When power is on, press the [save] button to turn on the save mode.

- ( [절약] ) will be displayed.
- When the away button is pressed during the save mode, the save mode turns into the away mode.
- When the save button is pressed during the mode, the save mode will be turned off.

 
## Lock Function

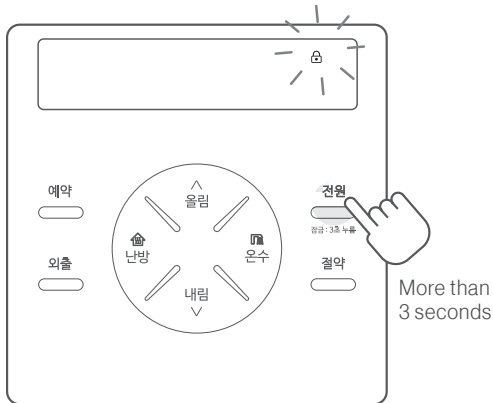

**1. When power is on, press and hold the [power] button for more than 3 seconds to lock.**

- The icon (🔒) will be displayed.
- When the power or heating button is pressed for more than 3 seconds, the lock will be unlocked.

## Display Brightness Adjustment

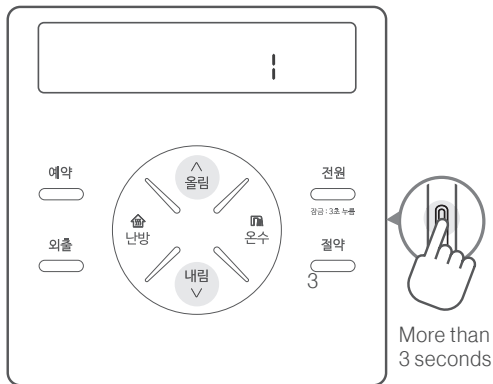


**1. When power is off, press and hold the [heating mode switch] button for more than 3 seconds.**

**2. When a number is displayed, press the [heating mode switch] repeatedly or press the [up] or [down] button to adjust brightness.**

- The default is stage one and there are three stages from 1 to 3.

### • Freeze Protection Alarm

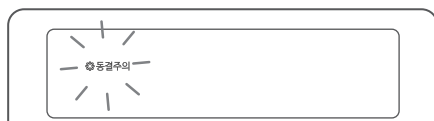

It will be displayed when a heating pump is turned on for freeze protection.