



How to Use the Premium Gas Stove

Operation

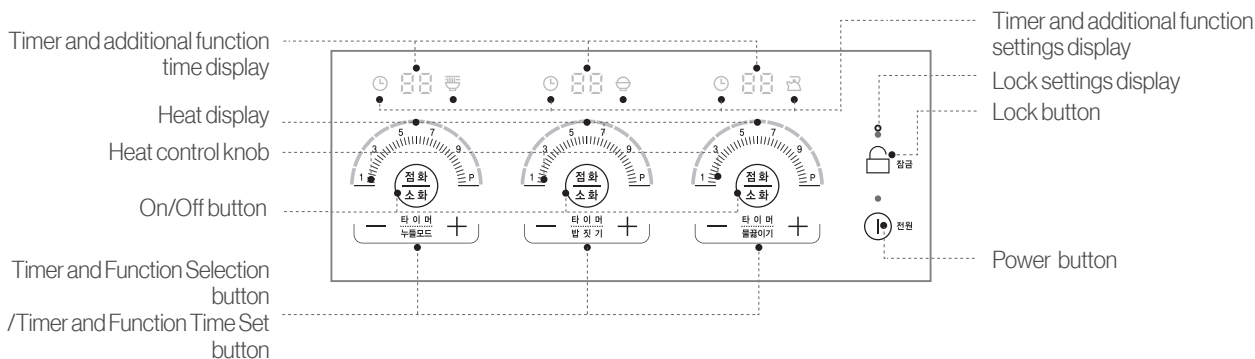


Turning On and Off

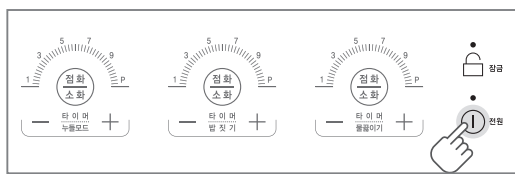


1. Press the [Power button] for 1 second.

- The top of the power button and lock settings display LED are illuminated.

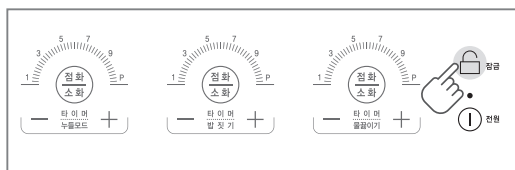


2. Press the [Lock button] to disable locking.

- The LED on the lock settings display turns off.
- The safety lock feature is for safety and reactivates for every initial operation.

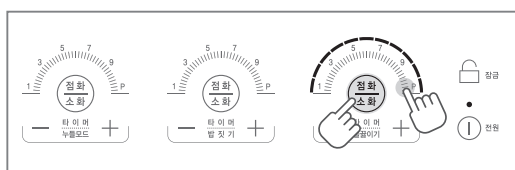

3. Press the [On/Off button] you want to use to start ignition.

- With the heat power control knob pressed, turn or touch to set levels from 1-P (11 levels).

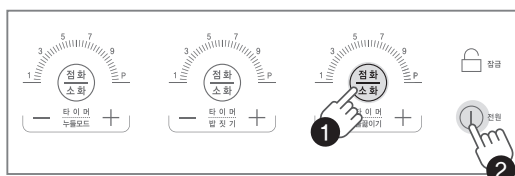


4. Press the [On/Off button] for the burner you want to turn off to turn off the burner. There will be nothing on the heat power display.


5. Press the [Power button] to turn off the power.

- If all burners are off, the stove will automatically turn off after 20 seconds even if the Power button is not pressed.
- Press the [Power button] while the stove is operating to turn off all burners.

Timer Settings

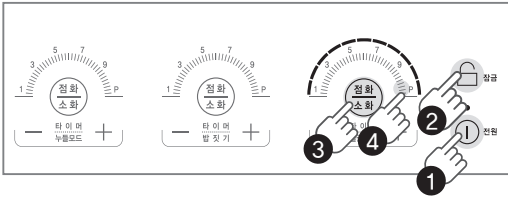


1. Turn on the burner you want to use, then set the heat power.

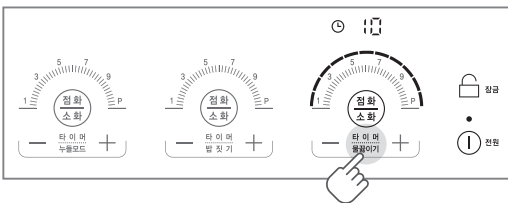


2. Once the heat power is set, press the burner's [Timer and Function Selection button].

- The timer setting display and additional function time display blink.

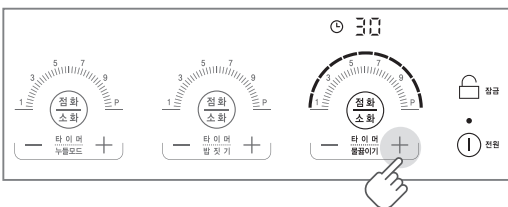


3. Press the [Timer and Function Time Setting button] to set your desired time.

- You can set it from 0-99 minutes.
- When setting, press and hold the [Timer and Time Settings button] to quickly change the time in 10-minute intervals.
- The timer will automatically start working 5 seconds after setup.

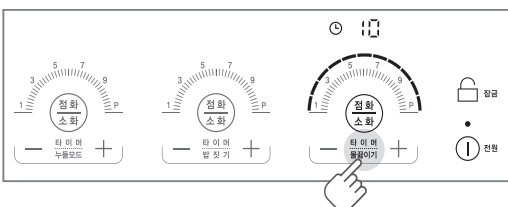


4. Press the [Timer Selection button] for 3 seconds while the timer is on to turn it off.

Function Settings (Noodle Mode)

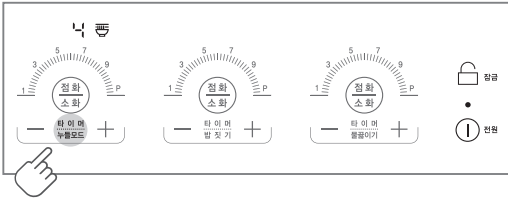


1. Start the left burner, then press the [Timer and Function Settings button] twice.

- The Noodle Mode picture lights up on the additional functions display.

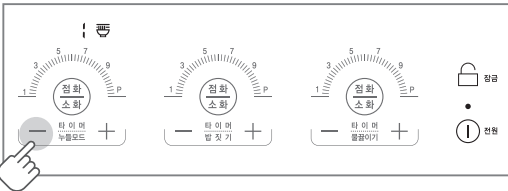


2. Press the [Timer and Function Time Settings button] to set the time you want to boil the noodles.

- You can set it from 0-99 minutes.

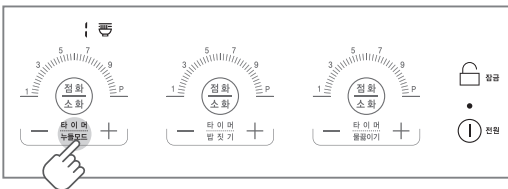

3. Five seconds after the noodle cooking time is set, Noodle Mode automatically begins.



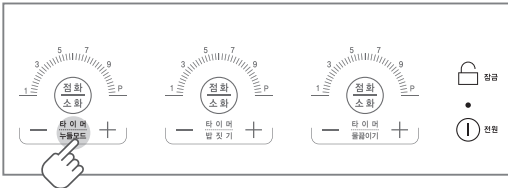


4. When the water boils, there is a notification sound and the heat switches to low to maintain warmth. Add the noodles at this time and press the [Timer and Function Selection button] to start cooking noodles for the set time.

- Noodle Mode turns off if the Timer and Function Selection button is not pressed within 2 minutes after the notification sound.
- Once the set noodle cooking time ends, the burner automatically turns off with another notification sound.

5. If you press the [Timer and Function Selection button] for 3 seconds during operation, the mode is automatically canceled, and the stove switches to the previously set heat power.

Function Settings (Cooking Rice)

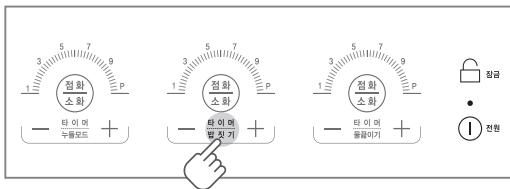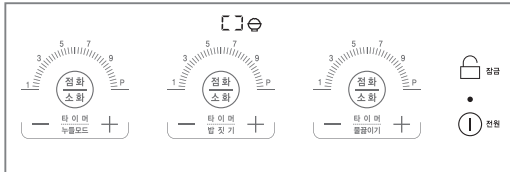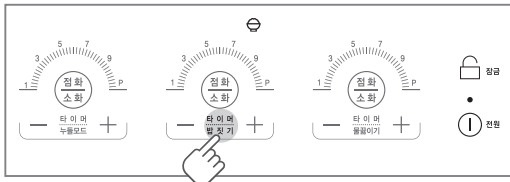

1. Turn on the central burner, then press the [Timer and Function Selection button] twice.




- The Cooking Rice picture lights up on the additional function display.

2. Once 5 seconds have passed, the cycle indicator on the timer and additional function time display turns on and rice cooking starts automatically.

- Once rice cooking is complete, the gas automatically turns off with a notification sound, and the stove switches to Steam Mode.
- When the stove switches to Steam Mode, the timer is automatically set to 10 minutes, and when the timer ends, rice cooking finishes with a notification sound.

3. If you press the [Timer and Function Selection button] for 3 seconds during operation, the mode is automatically canceled, and the stove switches to the previously set heat power.

Function Settings (Boiling Water)

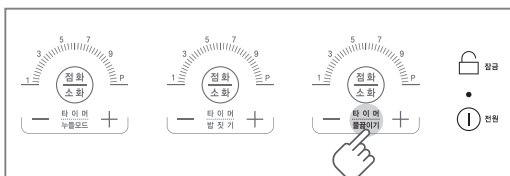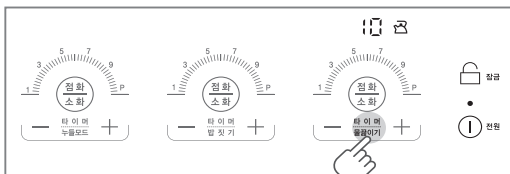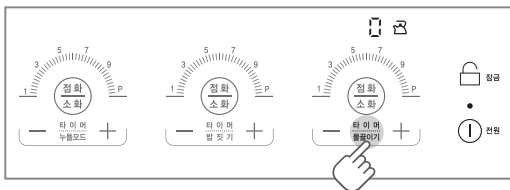

1. Turn on the right burner, then press the [Timer and Function Selection button] twice.

- The Boiling Water picture lights up on the additional function display.

2. Press the [Timer and Function Time Settings button] to set the warming time.

- You can set it from 0-99 minutes.

3. Water boiling begins automatically 5 seconds after the warming time is set.

- When the water boils, there is a notification sound, and the heat switches to low to keep the water warm.
- Once the set warming time is up, the burner automatically switches off with a notification sound.

4. Press the [Timer and Function Settings button] for 3 seconds during operation to cancel the mode.