 
 


How to use the electric range

 
Controls

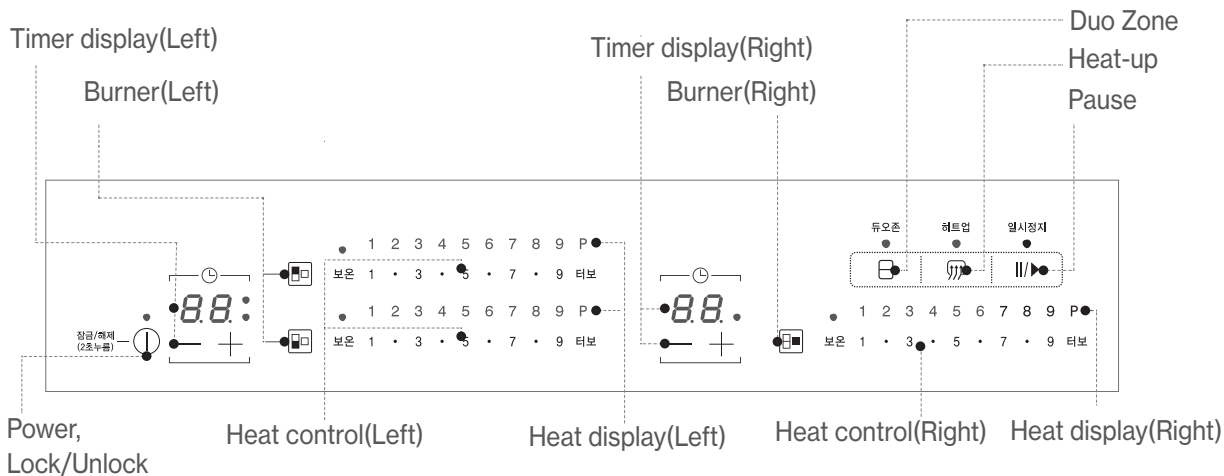


Ignite/Extinguish

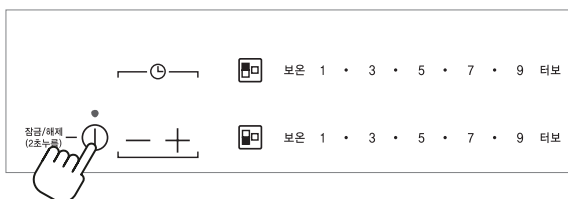

1. Press and hold [Power] for 1 seconds.

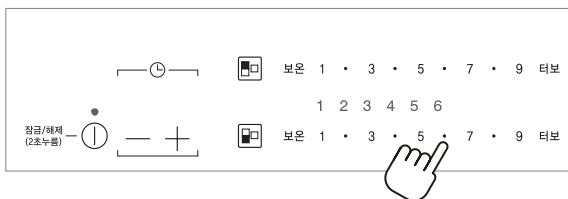


 2. Press [Select burner] to select the burner you want to use.

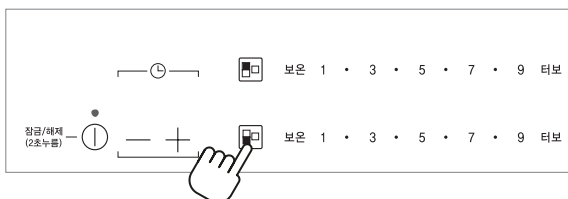


3. After cooking is finished, press and hold the button for the [burner] you want to turn off.

 Duo Zone feature

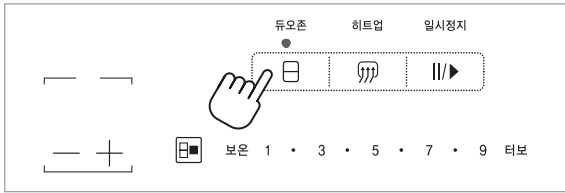

1. Turn on the power and press [Duo Cooking Zone].

 - To use Duo Zone, you need to put the right type of cookware on the burner.



2. Set the heat level using [Heat control].

3. Press [Duo Cooking Zone] once more to turn the feature off.

Pause feature



1. Press [Pause] while the stove is on.

(ST OP) will be shown on the heat display, and operation will pause.

2. Press [Pause] once more to restart operation.

 
Safety lock



1. With the stove off, press and hold [Lock/Unlock] for 2 seconds.

2. Press and hold [Lock/Unlock] once more for 2 seconds to turn the feature off.

Setting a timer

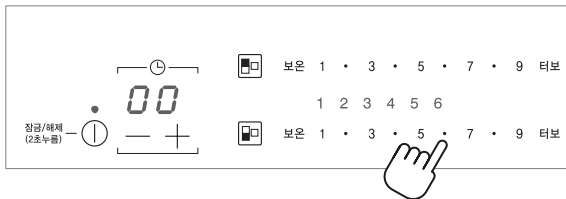


1. Press [Select burner] to select the burner you want to use.




2. Press [+ or -].

 3. Set the time using [+ or -]

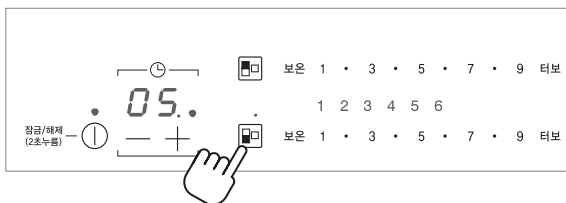

 4. If you are using the timer for several burners at once, you can press the [burner] button for each to see its remaining time.

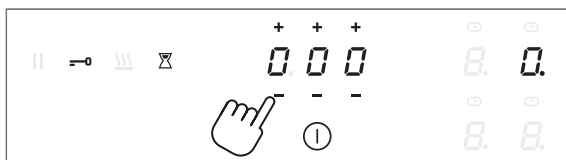

5. Press (00) or [+ -] simultaneously to turn off.

Heat-up feature



1. Turn on the power and use [heat control] for the burner you want to use to select the heat you want to automatically restore.





2. Press [Heat-up]. (A) will be displayed and the heat-up feature will begin.

3. The feature will turn off if you start using a different burner.

Beware

If the top of the glass is hot, (H) is displayed as a warning.

IH cookware(Front left, Rear left)

| | | |
|---------------------------------|------------------------|---|
| Enamel Iron Cast iron | Can be used |   IH Check the IH cookware mark. <ul style="list-style-type: none">• Do not use ceramic pots even if they have the IH mark.• Use cookware with a flat bottom that is in contact with the top of the stove.• Depending on the material, even IH cookware may not work or may not fully transmit heat.• (ㄷ) is marked for pots that are unsuitable to use for cooking. |
| Stainless steel | Check IH cookware mark | |
| Heat-resistant glass Ceramic | Do not use | |
| Aluminum Copper (nickel silver) | Do not use | |

• Inattention protection

If foreign matter, etc. stays in contact with the controls for more than 10 seconds, an alarm will sound and the error code (-) will be shown on the heat display.

• Power cutoff

If you press [Power] but do not select a burner within 10 seconds, the power will automatically turn off.