



# How to use the electric range


## Controls

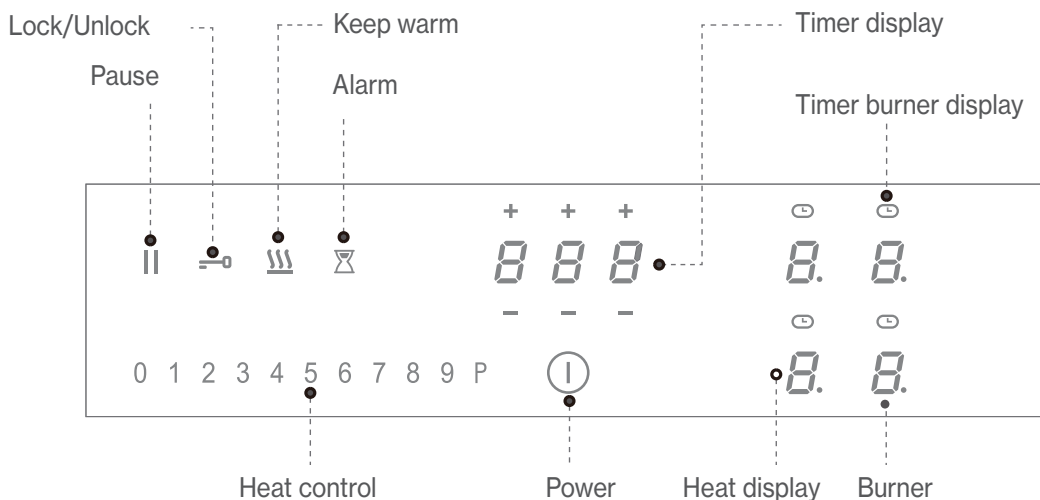


## Ignite/Extinguish

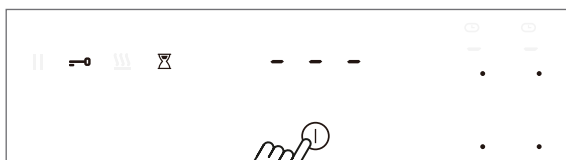

1. Press and hold [Power] for 2 seconds.

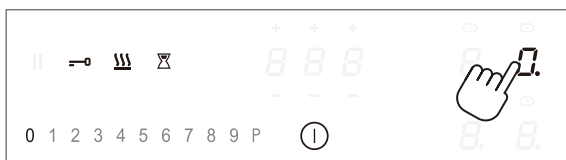

2. Press [Burner] to select the burner you want to use.

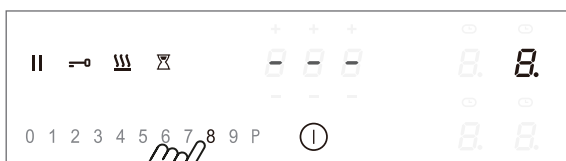


2. Set the heat level using [Heat control].



4. After cooking is complete, select the [burner] you want to turn off and slide the [heat control] all the way to the left. The heat will change to 0. You can also press 0 to turn off the heat.

## Booster feature


---

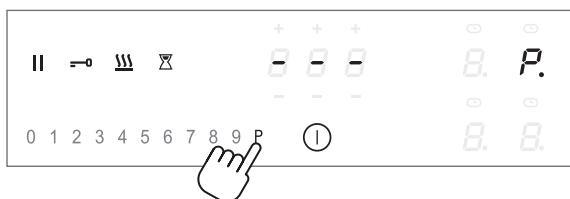

1. Turn on the power and select a [burner], then slide [heat control] all the way to the right or touch P.


## Bridge feature

---

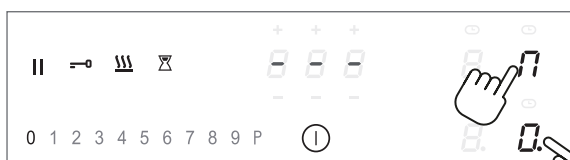

1. Press and hold the buttons for the front and rear [burners] simultaneously with the power on.


- To use, you need to put the right type of cookware on the burner.

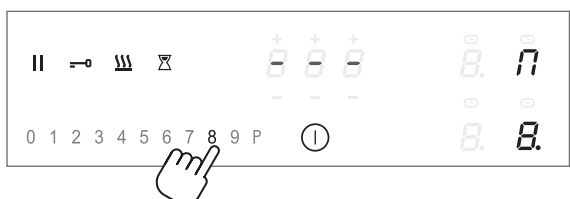


2. Set the heat level using [Heat control].
3. The feature will turn off if the heat is set to 0.

## Keep warm

---

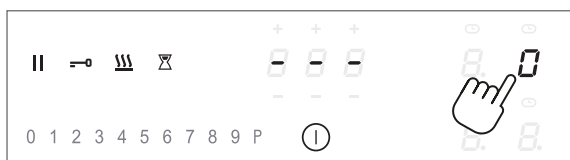

1. Turn on the power and press the button for the [burner] you want to use.

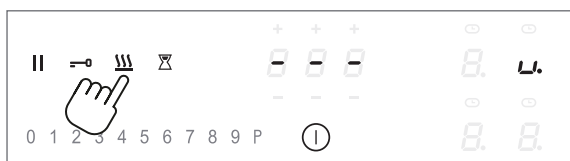

2. If you press [Keep Warm], the keep warm function is activated, and ( ⏸ ) is displayed on the heat display.
3. With the warm feature on, press [Warm] once more to turn the feature off.


## Pause feature

---




1. If you press [Pause] while the stove is on, ( || ) will be shown on the display and operation will pause.
2. Press [Pause] once more and press the [burner] button to restart operation.


## Setting a timer

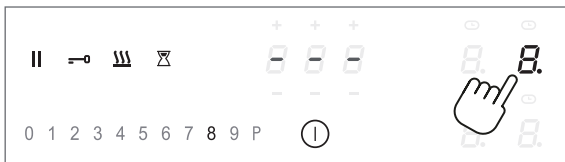

1. Press [burner] to select the burner you want to use.

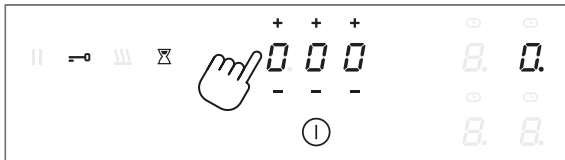


2. Press the [Timer Display]. (  $\overset{+}{0} \overset{+}{0} \overset{+}{0}$  ) will be shown.

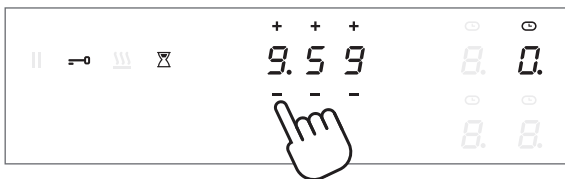


3. Set the time using [+ or -]

4. When setup is complete, the LED for the burner with the timer set will be lit up on the burner display.

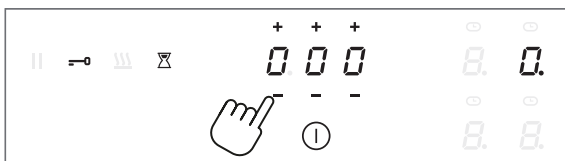


5. Select the burner with the timer set, then press [Timer Display] once the set time is shown and press [+ or -] to set to (  $\overset{+}{0} \overset{+}{0} \overset{+}{0}$  ) to turn it off.

## Heat-up feature

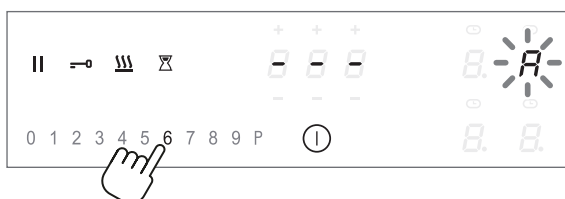

1. Turn on the power and press the button for the [burner] you want to use.


2. Press and hold for 3 seconds the heat you want to automatically restore after heating for a set time at a maximum heat from 1-8.

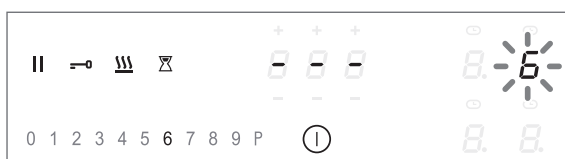


3. ( *A* ) and the set heat blink, and the heat-up feature begins.

4. Press and hold the button for the [burner] for at least 3 seconds to turn the heat-up feature off.


## Alarm feature

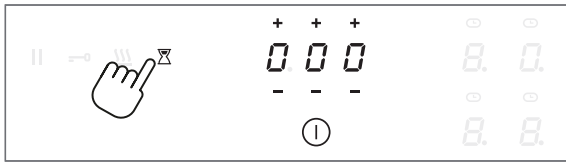

1. Turn on the power and press [Alarm].

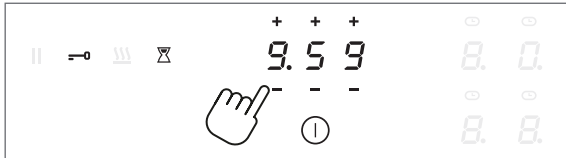


2. Press [+ or -] to set the alarm time.

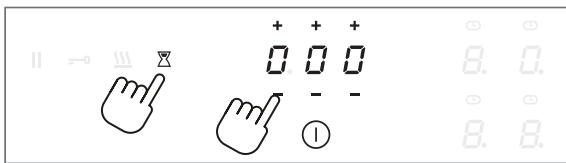

3. Press [Alarm].

4. Press [+ or -] to set (000) to turn off the feature.

## Safety lock

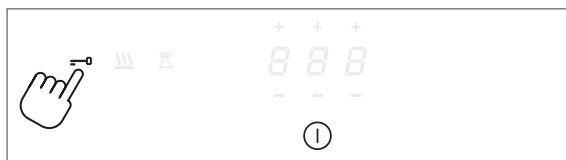

1. Turn on the power and press and hold [Lock/Unlock] for 2 seconds.

2. Press and hold [Lock/Unlock] once more for 2 seconds while the feature is on to turn it off.

## Recall feature



1. If you turn the stove on within 5 seconds of turning it off, Pause will blink.



2. Press [Pause] to restart the stove at the heat that was set before it turned off.



## Beware

---

If the top of the glass is hot, ( H ) is displayed as a warning.

## IH cookware(Front left, Rear left)

---

Enamel Iron Cast iron	Can be used	  IH Check the IH cookware mark. <ul style="list-style-type: none"><li>• Do not use ceramic pots even if they have the IH mark.</li><li>• Use cookware with a flat bottom that is in contact with the top of the stove.</li><li>• Depending on the material, even IH cookware may not work or may not fully transmit heat.</li><li>• ( ㄷ ) is marked for pots that are unsuitable to use for cooking.</li></ul>
Stainless steel	Check IH cookware mark	
Heat-resistant glass Ceramic	Do not use	
Aluminum Copper (nickel silver)	Do not use	

---

### • Inattention protection

If foreign matter, etc. stays in contact with the controls for more than 10 seconds, an alarm will sound and the error code ( - ) will be shown on the heat display.

### • Power cutoff

If you press [Power] but do not select a burner within 10 seconds, the power will automatically turn off.