 



# How to use the gas boiler

 
## Indoor Thermostat

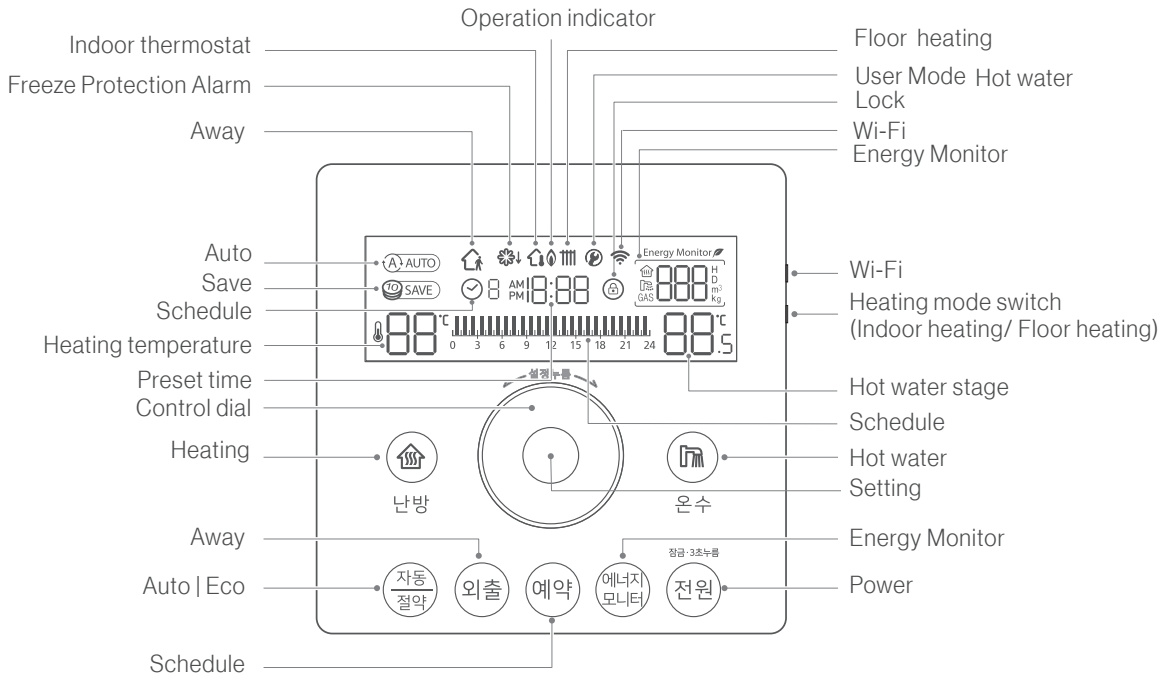



### • Heating Mode

[Indoor heating mode] or [floor heating mode] can be selected regarding the environment. Upon purchase, the default is the indoor heating mode (  ).

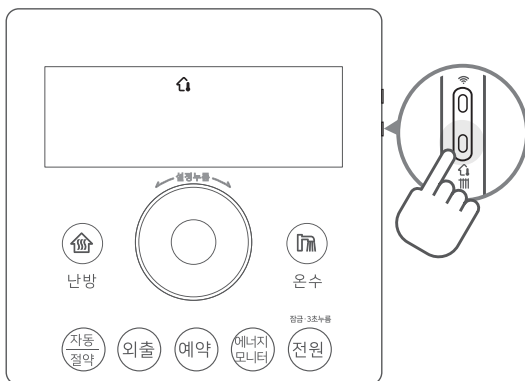 <p><b>Indoor heating mode</b> Indoor temperature sensor detects room temperature and controls the temperature.</p>	 <p><b>Floor heating mode</b> Floor temperature sensor detects water temperature from a boiler and controls the floor temperature.</p>
--	--




### 1. When power is on, press the [heating mode switch] button.

 - (  ) Indoor heating mode ↔ (  ) Floor heating mode can be switched.

# Heating / Quick Heat

---

## Heating

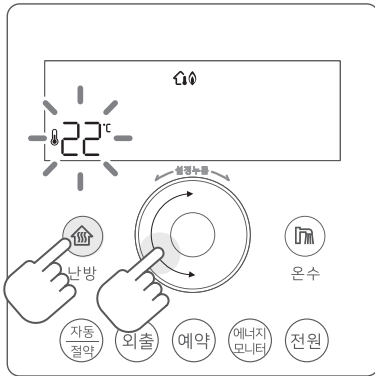

### 1. When power is on, press the [heating] button to turn on the heating system.

- The heating temperature blinks on the LCD.
- If the heating button is pressed when the system is on, it will be turned off.

### 2. Turn the control dial to set your desired temperature.

- If the current temperature is lower than the set temperature, the combustion indicator (🔥) on the LCD turns on.

---

## Quick Heat



 
### 1. When power is on, press the [heating] button to turn on the heating system.

### 2. Press and hold the [Heat] button for at least 3 seconds.

- Heating is set to the highest temperature, and Start (🔥) flashes on the indoor temperature control LCD display.
- If the set temperature changes during heating or you press and hold the [Heat] button for at least 3 seconds, Quick Heat is turned off.

# Hot water / Preheat Water

## Hot water

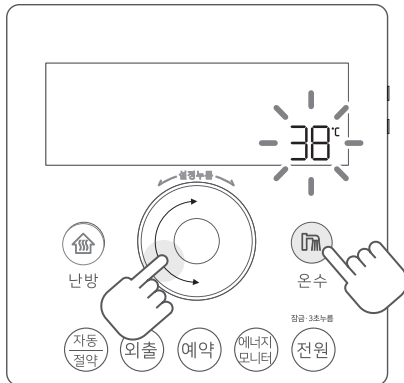


### 1. When power is on, press the [hot water] button to turn on the hot water system.

- The hot water temperature blinks on the LCD.
- Press the [Hot Water] button while in operation to stop hot water.

### 2. Turn the control dial to set your desired temperature.

- With heating and hot water both on, press the [Hot Water] button to set your desired temperature when the hot water temperature blinks.
- You can only change from between 30°C to 55°C while hot water is in use. To change to 60°C, press the Higher button while the hot water tap is off.
 
## Preheat Water

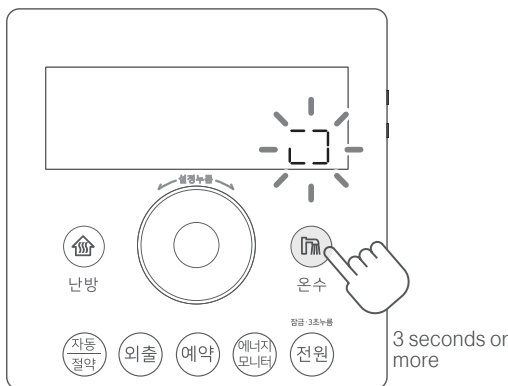


### 1. When power is on, press the [hot water] button to turn on the hot water system.

### 2. Press and hold the [Hot Water] button for at least 3 seconds.

- The circulation indicator flashes on the hot water temperature display, and preheating begins.
- Turn on the hot water tap while operating or press and hold the [Hot Water] button for at least 3 seconds to turn off hot water preheating.


# Auto | Eco / Away / Schedule Mode
 
## Auto | Eco Mode

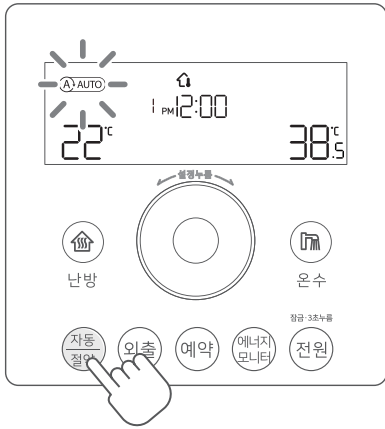


### 1. Press the [Auto | Eco] button while the power is on to select a mode.

 - The auto indicator ( **A AUTO** ) blinks on the LCD.



- You cannot set the heating temperature or hot water temperature in auto mode.
- Each time the [Auto | Eco] button is pressed, the mode changes.
- When the away button is pressed during the save mode, the save mode turns into the away mode.
- When the save button is pressed during the mode, the save mode will be turned off.


## Away mode

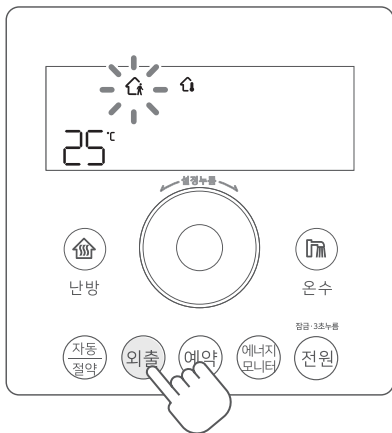 

### 1. When power is on, press the [away] button to turn on the away mode.


- ( ) will be displayed.
- The minimum temperature heating system will be turned on every 4 hours to keep the pleasant room temperature.
- If the away or heating button is pressed when the mode is on, the away mode will be turned off.
 
## Schedule mode

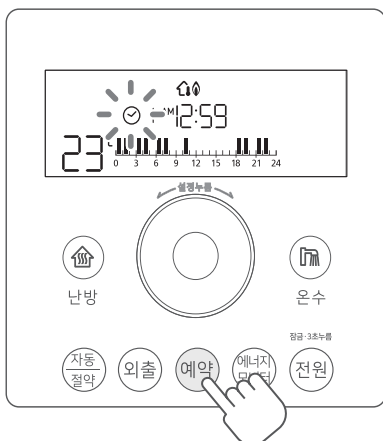


### 1. When power is on, press the [schedule] button to preset time.

  - ( ) will be displayed.
- Press the [schedule] button to change the reservation number.

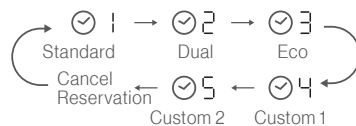


 
- Press the [schedule] button while operating to disable reservation mode.


# Energy Monitor

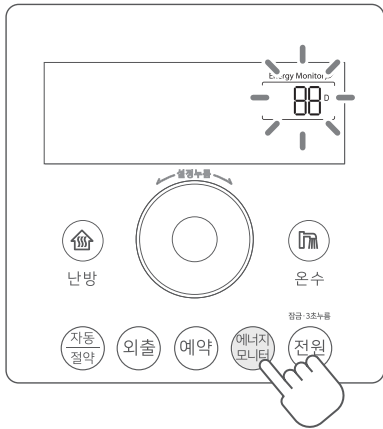

 
## 1. Press the [Energy Monitor] button while power is off to select your desired item.

- The energy monitor indicator (  ) on the LCD is on.
- Each time the [Energy Monitor] button is pressed, all energy information changes.




- Press and hold the [Energy Monitor] button for at least 3 seconds. (  ) blinks on the LCD and information is reset.

# Control LED brightness / Turn button and notification sounds on or off / Control volume

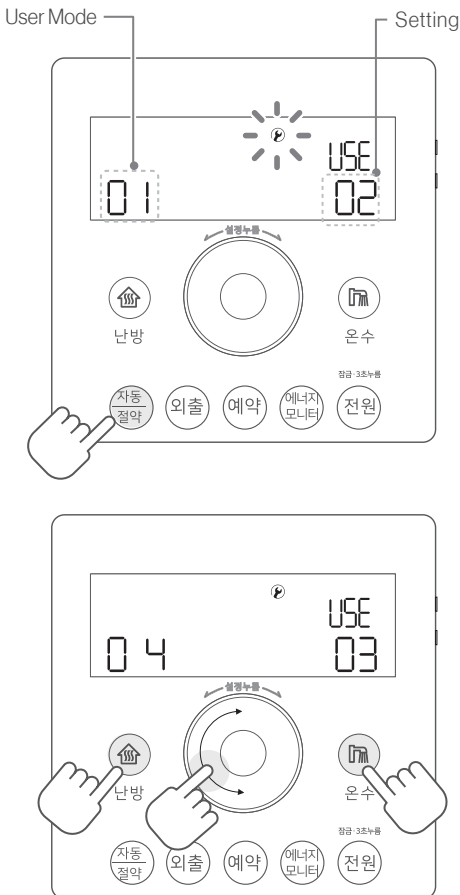

## 1. Press and hold the [Auto|Eco] and [Out] buttons for at least 3 seconds while the power is off.

- The service mode indicator (  ) on the LCD is on.

## 2. Turn the control dial to select your desired user mode.

- 01: LED brightness
- 02: Button sound control
- 03: Notification sound control (including error notifications and freeze warnings)
- 04: Voice information volume control (change separately regardless of button and notification sound volume)

## 3. Press the [Hot Water] button after selecting a feature to set it as you wish.

- 01: Stage 1
- 02: Stage 2
- 03: Stage 3
- 04: Stage 4
- 05: Stage 5
- 0n: On
- 0F: Off

## 4. After setup, press the [Heat] button to stop user mode.

# Lock Function

---



## 1. When power is on, press and hold the [power] button for more than 3 seconds to lock.

- The icon (🔒) will be displayed.
- When the power or heating button is pressed for more than 3 seconds, the lock will be unlocked.

---

### • Control Display



#### Freeze Protection Alarm

It will be displayed when a heating pump is turned on for freeze protection.

---