 


How to use the gas boiler


Indoor Thermostat

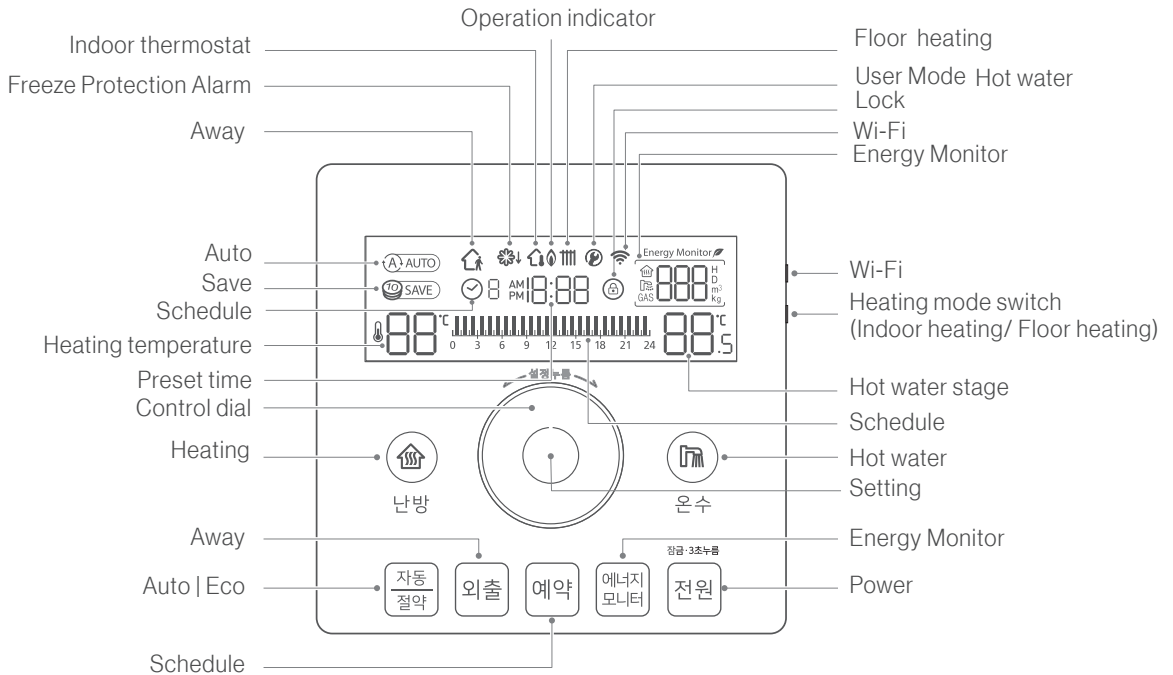

• Heating Mode

[Indoor heating mode] or [floor heating mode] can be selected regarding the environment. Upon purchase, the default is the indoor heating mode (🏠).

	<p>Indoor heating mode Indoor temperature sensor detects room temperature and controls the temperature.</p>		<p>Floor heating mode Floor temperature sensor detects water temperature from a boiler and controls the floor temperature.</p>
---	--	---	---

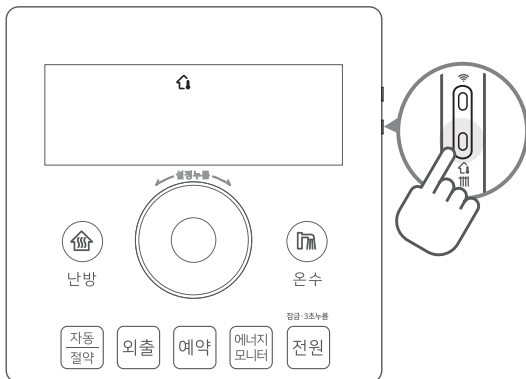 


1. When power is on, press the [heating mode switch] button.

- (🏠) Indoor heating mode ↔ (🔥) Floor heating mode can be switched.

Heating / Quick Heat

 Heating

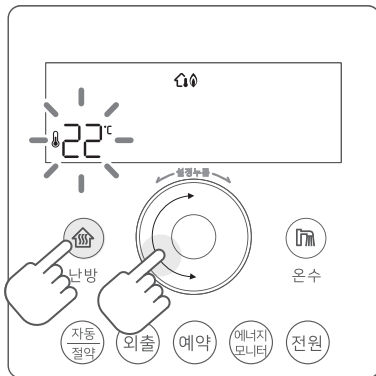

1. When power is on, press the [heating] button to turn on the heating system.

- The heating temperature blinks on the LCD.
- If the heating button is pressed when the system is on, it will be turned off.

2. Turn the control dial to set your desired temperature.

- If the current temperature is lower than the set temperature, the combustion indicator (🔥) on the LCD turns on.

Quick Heat



3 seconds
or more

 
1. When power is on, press the [heating] button to turn on the heating system.

2. Press and hold the [Heat] button for at least 3 seconds.

- Heating is set to the highest temperature, and Start (🔥) flashes on the indoor temperature control LCD display.
- If the set temperature changes during heating or you press and hold the [Heat] button for at least 3 seconds, Quick Heat is turned off.

Hot water / Preheat Water

Hot water

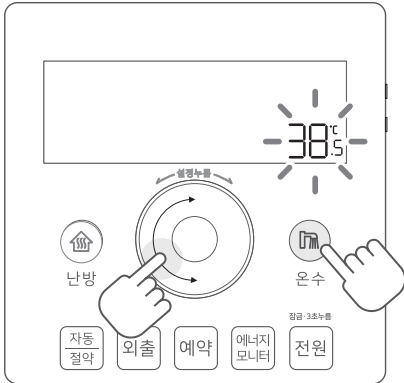


1. When power is on, press the [hot water] button to turn on the hot water system.

- The hot water temperature blinks on the LCD.
- Press the [Hot Water] button while in operation to stop hot water.

2. Turn the control dial to set your desired temperature.

- With heating and hot water both on, press the [Hot Water] button to set your desired temperature when the hot water temperature blinks.
- You can only change from between 30°C to 55°C while hot water is in use. To change to 60°C, press the Higher button while the hot water tap is off.

 Preheat Water

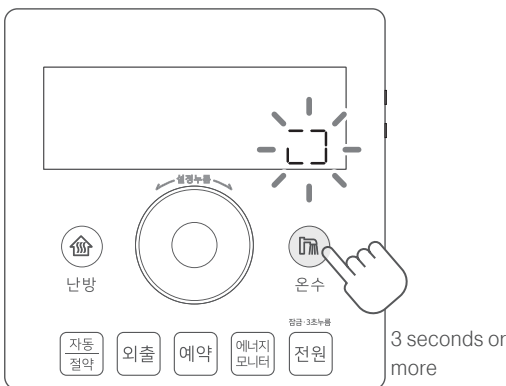

1. When power is on, press the [hot water] button to turn on the hot water system.

2. Press and hold the [Hot Water] button for at least 3 seconds.

- The circulation indicator flashes on the hot water temperature display, and preheating begins.
- Turn on the hot water tap while operating or press and hold the [Hot Water] button for at least 3 seconds to turn off hot water preheating.


Auto | Eco / Away / Schedule Mode

Auto | Eco Mode




1. Press the [Auto | Eco] button while the power is on to select a mode.

 - The auto indicator (**A>AUTO**) blinks on the LCD.



- You cannot set the heating temperature or hot water temperature in auto mode.
- Each time the [Auto | Eco] button is pressed, the mode changes.
- When the away button is pressed during the save mode, the save mode turns into the away mode.
- When the save button is pressed during the mode, the save mode will be turned off.

 
Away mode

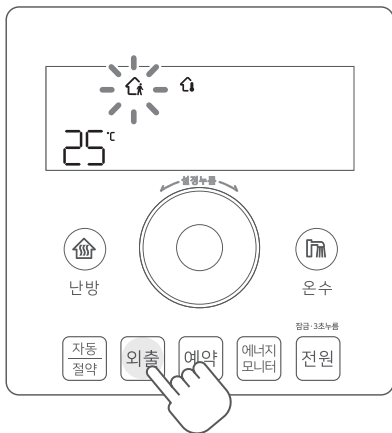

1. When power is on, press the [away] button to turn on the away mode.


- () will be displayed.
- The minimum temperature heating system will be turned on every 4 hours to keep the pleasant room temperature.
- If the away or heating button is pressed when the mode is on, the away mode will be turned off.

 Schedule mode

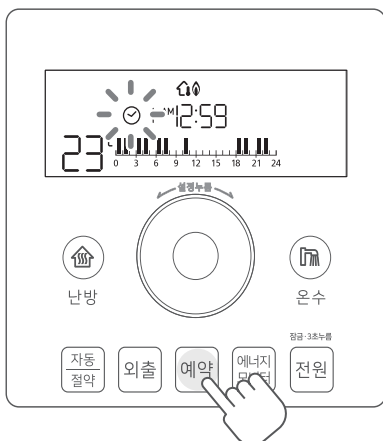


1. When power is on, press the [schedule] button to preset time.

  - () will be displayed.
- Press the [schedule] button to change the reservation number.

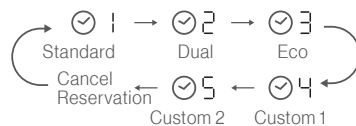


 
- Press the [schedule] button while operating to disable reservation mode.


Energy Monitor

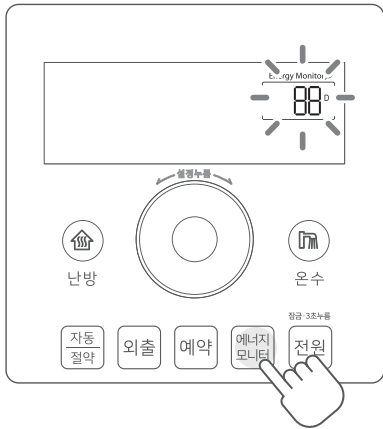

 
1. Press the [Energy Monitor] button while power is off to select your desired item.

- The energy monitor indicator () on the LCD is on.
- Each time the [Energy Monitor] button is pressed, all energy information changes.



- Press and hold the [Energy Monitor] button for at least 3 seconds. () blinks on the LCD and information is reset.

Control LED brightness / Turn button and notification sounds on or off / Control volume

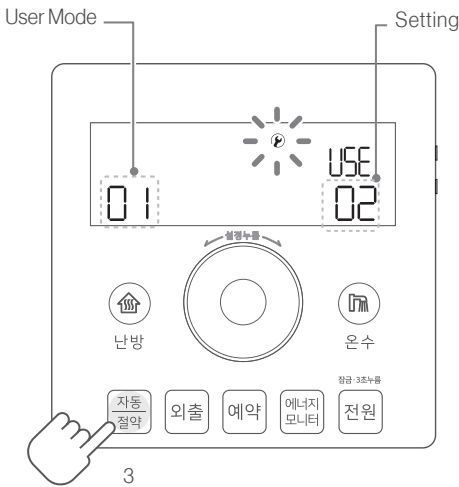

1. Press and hold the [Auto|Eco] and [Out] buttons for at least 3 seconds while the power is off.

- The service mode indicator () on the LCD is on.

 
2. Turn the control dial to select your desired user mode.

- 01: LED brightness
- 02: Button sound control
- 03: Notification sound control (including error notifications and freeze warnings)
- 04: Voice information volume control (change separately regardless of button and notification sound volume)


3. Press the [Hot Water] button after selecting a feature to set it as you wish.

- 01: Stage 1
- 02: Stage 2
- 03: Stage 3
- 04: Stage 4
- 05: Stage 5
- 0n: On
- 0F: Off

4. After setup, press the [Heat] button to stop user mode.

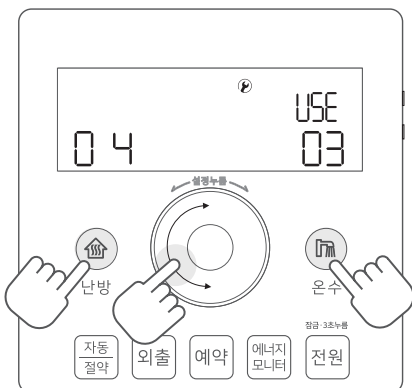


Lock Function

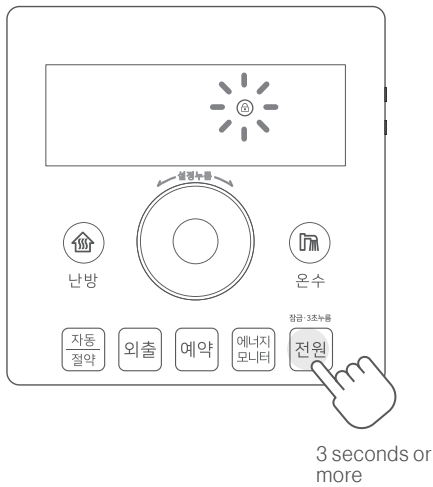 


1. When power is on, press and hold the [power] button for more than 3 seconds to lock.

- The icon (☺) will be displayed.
- When the power or heating button is pressed for more than 3 seconds, the lock will be unlocked.

• Control Display

 **Freeze Protection Alarm**
It will be displayed when a heating pump is turned on for freeze protection.

 Emergency Operation

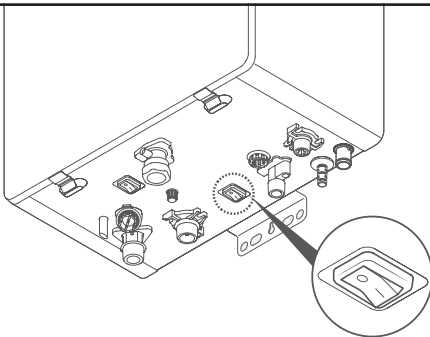

1. Press the [Emergency Operation] switch on the bottom of the boiler.

- Emergency operation of the boiler is possible if the indoor temperature controller is malfunctioning or not connected.