



How to use the gas dishwasher

Controls

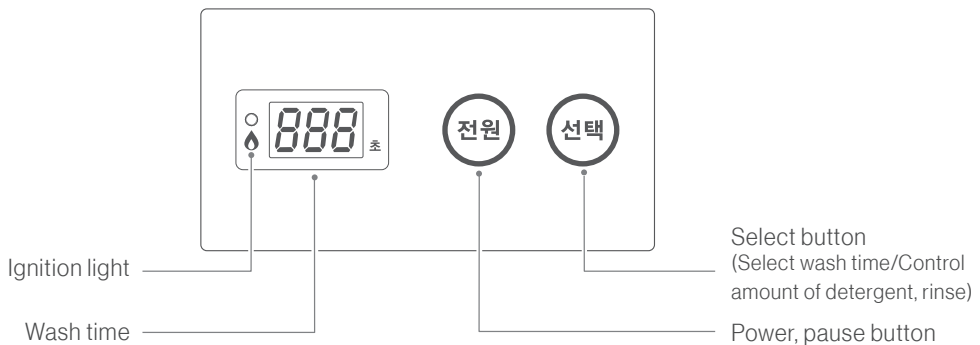

How to Wash

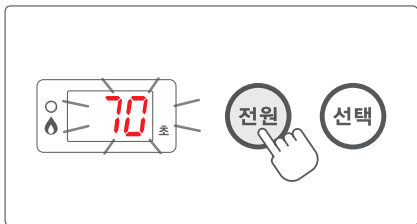

1. Press the [Power] button. The set wash time will flash on the display, and the dishwasher will automatically prepare.



2. When preparations are complete, there will be a sound, and the set wash time will flash on the display.




3. Press the [Select] button to set the wash time. After preparations are complete, press the Select button to choose the wash time.

- You can set a wash time of 70, 90, or 120 seconds.


| Category | 70 sec | 90 sec | 120 sec |
|------------|--------|--------|---------|
| Wash time | 43 sec | 65 sec | 95 sec |
| Stop time | 5 sec | 5 sec | 5 sec |
| Rinse time | 12 sec | 12 sec | 12 sec |
| Dry time | 10 sec | 8 sec | 8 sec |

You can change between preparation and starting washing.


How to Wash

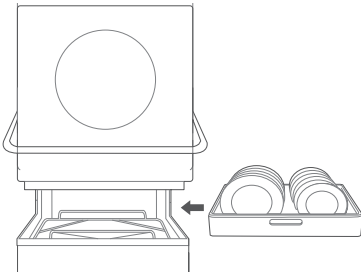

4. Open the dishwasher door and fill the rack with dishes.
5. Close the dishwasher door to automatically start washing, rinsing, and drying.

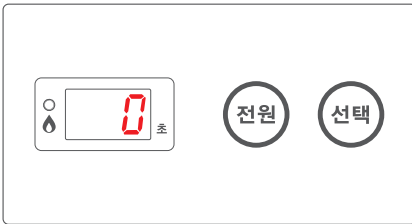


6. When washing is complete, a wash time of (0) shows on the display and there is a sound.
7. Open the dishwasher door and pull out the rack.

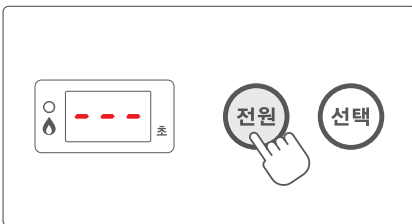


8. If you are finished using the dishwasher, press and hold the [Power] button for 3 seconds to turn off all lights and stop operation.

Accelerated detergent/rinse supply

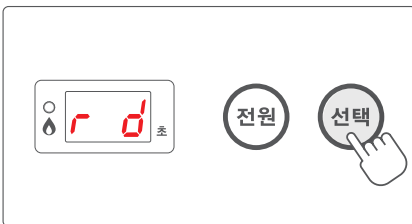



1. Press and hold the [Select] button for at least 3 seconds while the power is off (---), and (r d) is shown on the display.

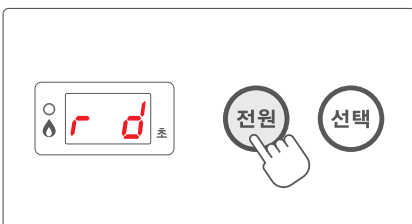

2. Press the [Power] button to more quickly supply detergent and rinse for 60 seconds.

- Press the [Power] button once more during accelerated supply to stop it.

Rinse quantity control

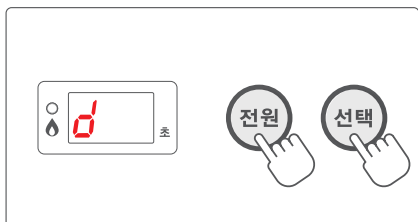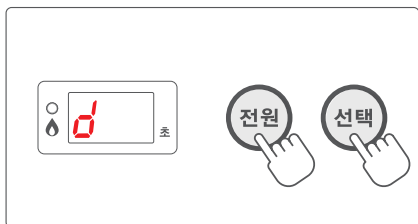

1. Press and hold the [Select] button for at least 3 seconds. Press the [Select] button once more (for less than 3 seconds) while (r d) is displayed to set rinse control, [r].

2. Press the [Power] button (for less than 3 seconds) to enter rinse.


3. Press the [Select] button to control the amount of rinse inserted from levels 1-12.

- Select the amount of rinse you want to put in.

4. Press the [Power] button to confirm your selection control mode.

| Rinse | r 1 | r 2 | r 3 | r 4 | r 5 | r 6 | r 7 | r 8 | r 9 | r 10 | r 11 | r 12 |
|-------|------|------|--------|------|------|------|------|------|------|------|------|------|
| | 0sec | 1sec | 1.5sec | 2sec | 3sec | 4sec | 5sec | 6sec | 7sec | 8sec | 9sec | 10se |

Detergent quantity control

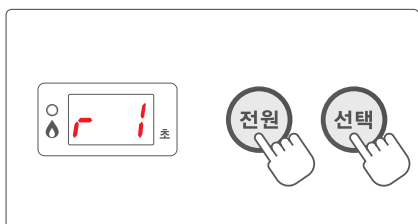

1. Press and hold the [Select] button for at least 3 seconds. Press the [Select] button twice more (for less than 3 seconds) with (r d) displayed to set detergent control, (d).

2. Press the [Power] button (for less than 3 seconds) to enter detergent control mode.

3. Press the [Select] button to control the amount of detergent inserted from levels 1-12.

- Select the amount of detergent you want to put in.

4. Press the [Power] button to confirm your selection.

| Detergent | r 1 | r 2 | r 3 | r 4 | r 5 | r 6 | r 7 | r 8 | r 9 | r 10 | r 11 | r 12 |
|-----------|------|------|------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| | 0sec | 6sec | 7sec | 10sec | 12sec | 14sec | 17sec | 18sec | 19sec | 22sec | 24sec | 30sec |

Automatic detection control

| Automatic detection control indicator | Contents | Actions |
|---------------------------------------|--|--|
| E89 | Wash water/rinse water frozen | <ul style="list-style-type: none"> The surrounding temperature is below 10°C and so the wash water or rinse water has frozen and the dishwasher will not operate. Please contact our service center. |
| E15 | Wash water/rinse water overheated | <ul style="list-style-type: none"> Please contact our service center. |
| E31 | Rinse water thermistor disconnected or short-circuited | |
| E32 | Wash water thermistor disconnected or short-circuited | |
| E44 | Rinse water level detection problem | |
| E51 | Power switch fault | |
| E26 | Rinse water fill error | <ul style="list-style-type: none"> Check that the drainpipe in the water tank is correctly inserted. Check whether the tank water level detector is dirty or blocked. Check whether the water supply valve is locked, then open the valve and press the power button. Check that water is supplied properly to the heater. If the issue is not resolved, please contact our service center. |
| E42 | Rinse water fill error | |
| E43 | Low rinse water error | |
| E11 | Fire out during ignition | <ul style="list-style-type: none"> Check whether the gas valve is closed, then open the valve and press the power button again. Check whether the gas supply pressure is low or gas is decreased. If the gas continues not to ignite, please contact our service center. |
| E72 | | |
| E12 | Ignition failure | <ul style="list-style-type: none"> This occurs if the gas supply is blocked or the gas supply pressure drops. (LPG) |