 


How to use the gas boiler


Indoor Thermostat

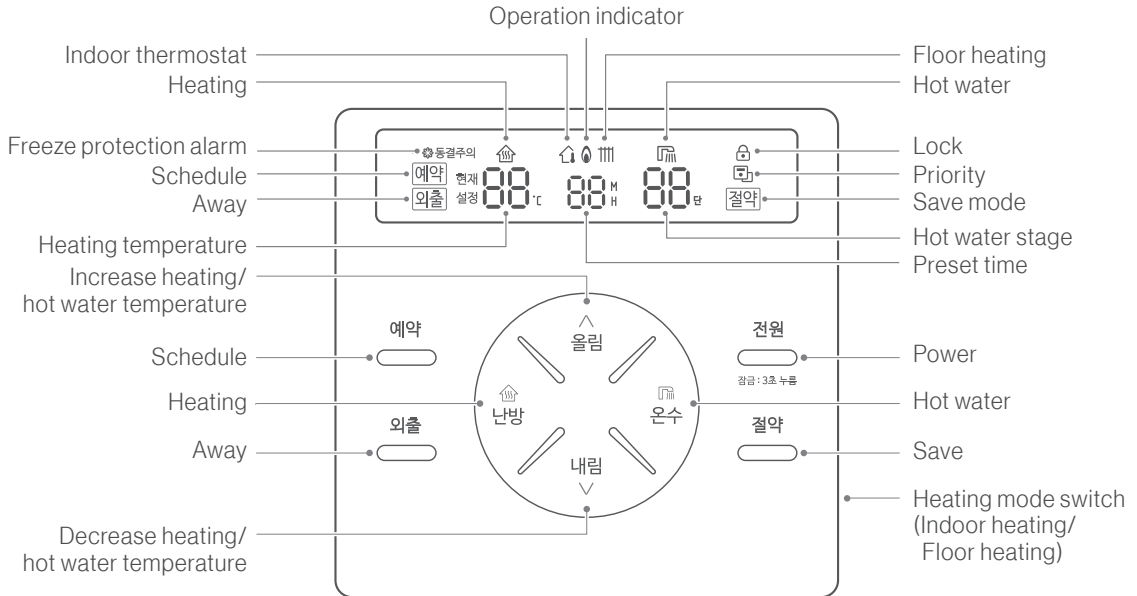

• Heating Mode

[Indoor heating mode] or [floor heating mode] can be selected regarding the environment. Upon purchase, the default is the indoor heating mode ().


<p>Indoor heating mode Indoor temperature sensor detects room temperature and controls the temperature.</p>	<p>Floor heating mode Floor temperature sensor detects water temperature from a boiler and controls the floor temperature.</p>
--	---

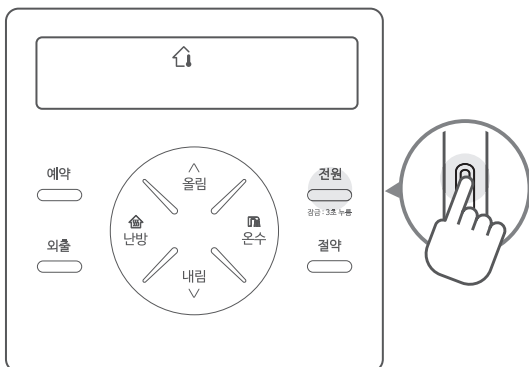 

1. When power is on, press the [heating mode switch] button.

- () Indoor heating mode ↔ () Floor heating mode can be switched.

 Heating/Hot Water Function

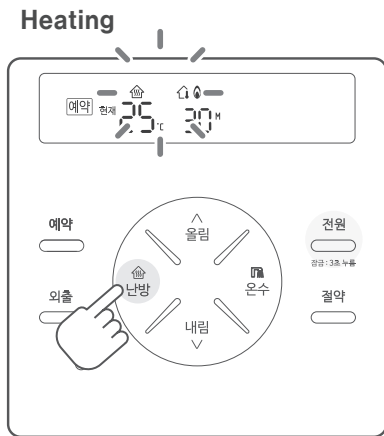


1. When power is on, press the [heating] button to turn on the heating system.

- When the boiler is working, the combustion indicator (🔥) is on and the heating indicator (🌊) blinks.
- If the heating button is pressed when the system is on, it will be turned off.

2. Set the desired temperature with the [up] and [down] buttons.

- If the current temperature is higher than the target temperature, the heating system will not be turned on.

 Hot water

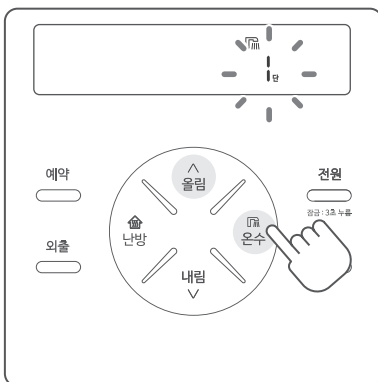

1. When power is on, press the [hot water] button to turn on the hot water system.

 
- When both of the heating and hot water systems are on, press the hot water button two times to turn off the hot water system.

2. Set the desired hot water stage with the [up] and [down] buttons.

- There are three stages from 1 to 3.


Schedule/Away/Save Mode

Schedule mode

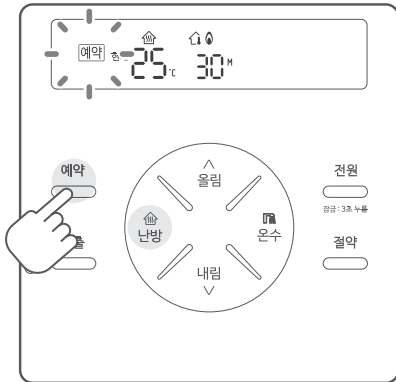


1. When power is on, press the [schedule] button to preset time.

 - ([예약]) will be displayed.
- Each time the ([예약]) button is pressed, reservation time changes at 1-hour or 4-hour intervals.



- Press the [Reservation] button while operating to disable reservation mode.

 
Away mode

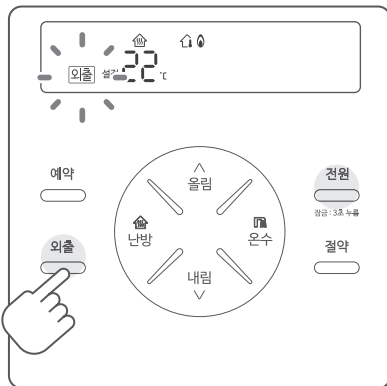

1. When power is on, press the [away] button to turn on the away mode.

- ([외출]) will be displayed.
- The minimum temperature heating system will be turned on every 4 hours to keep the pleasant room temperature.
- If the away or heating button is pressed when the mode is on, the away mode will be turned off.

 
Save mode

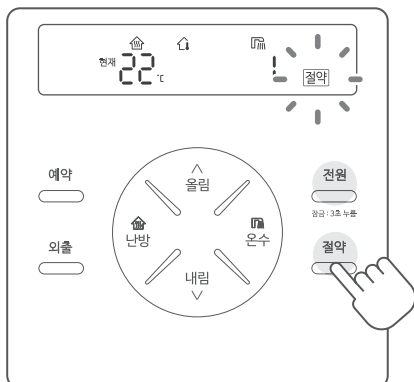

1. When power is on, press the [save] button to turn on the save mode.

- ([절약]) will be displayed.
- When the away button is pressed during the save mode, the save mode turns into the away mode.
- When the save button is pressed during the mode, the save mode will be turned off.

 
Lock Function

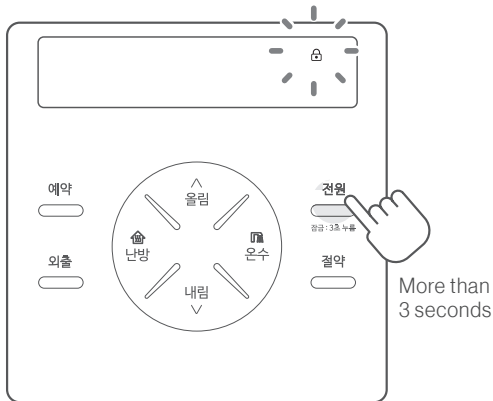

1. When power is on, press and hold the [power] button for more than 3 seconds to lock.

- The icon (🔒) will be displayed.
- When the power or heating button is pressed for more than 3 seconds, the lock will be unlocked.

 Display Brightness Adjustment

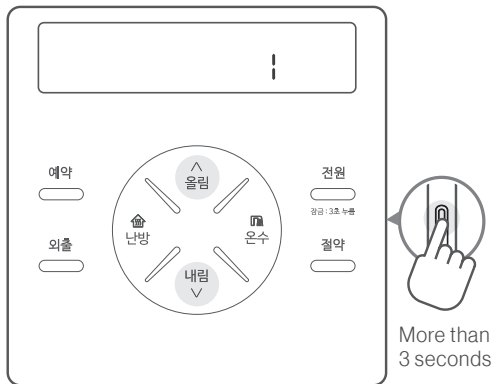


1. When power is off, press and hold the [heating mode switch] button for more than 3 seconds.

2. When a number is displayed, press the [heating mode switch] repeatedly or press the [up] or [down] button to adjust brightness.

- The default is stage one and there are three stages from 1 to 3.

 • Freeze Protection Alarm

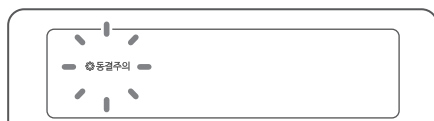

It will be displayed when a heating pump is turned on for freeze protection.