


How to use the electric range

Controls

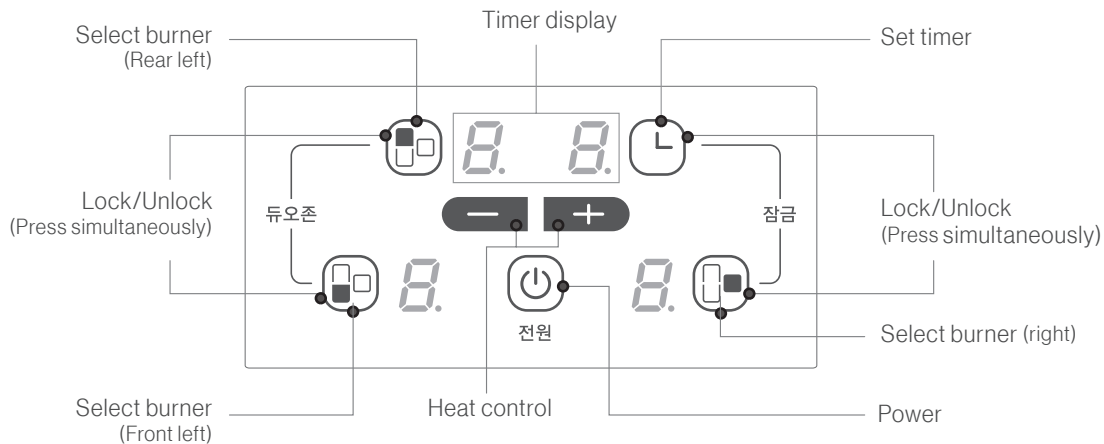

Ignite/Extinguish



1. Press and hold [Power] for 2 seconds.

2. Press [Select burner] to select the burner you want to use.



3. Press [Heat control] to control the heat as you like.





4. After you finish cooking, press and hold [Select burner] for the burner you want to turn off or press [-] until the heat reaches (0).

Booster feature



1. Turn on the power and select a burner, then use [Heat control] to select a heat up to 9, then press [+] once more.

Duo Zone feature

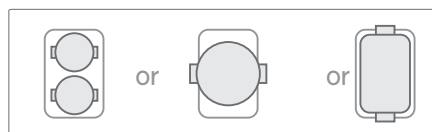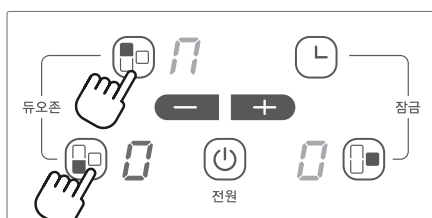

1. With the power on, press [front and rear left burner selection] simultaneously.

- To use Duo Zone, you need to put the right type of cookware on the burner.


2. Set the heat level using [Heat control].

Keep warm




1. Press [Heat control] for the burner you are using to lower the heat to 1.
2. Press [-] once more. (1) shows on the display and the keep warm feature turns on.

Setting a timer

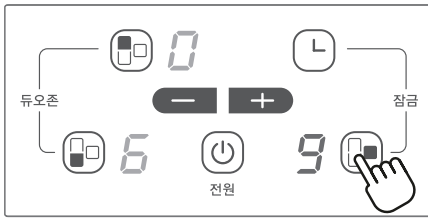


1. Select the burner you are using and would like to set a timer for.

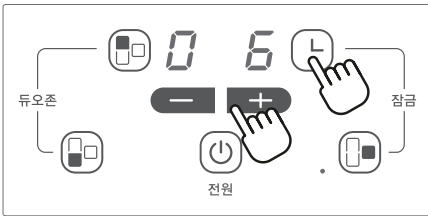

2. Press [Set timer]. (00) shows on the timer display.
3. Press [Heat control] to set the time.

Disabling the timer

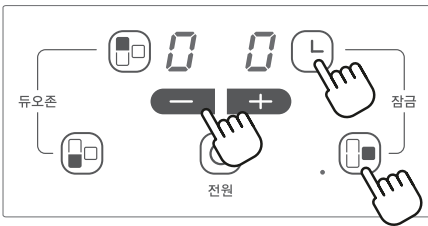


1. Select the burner with a timer set.
2. Press [Set timer].
3. Press [Heat control] to set the timer to (00) minutes to stop it.

Safety lock



1. Turn on the power, then press and hold [Timer] and [Select right burner] simultaneously for 2 seconds.

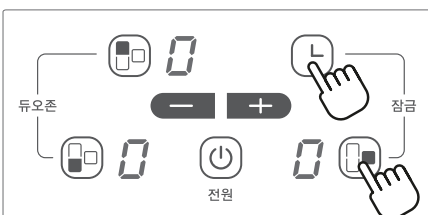



2. To turn off safety lock, press and hold [Timer] and [Select right burner] simultaneously for 2 seconds.

Beware

If the top of the glass is hot, (H) is displayed as a warning.

IH cookware

Enamel Iron Cast iron	Can be used	  IH Check the IH cookware mark. <ul style="list-style-type: none">• Do not use ceramic pots even if they have the IH mark.• Use cookware with a flat bottom that is in contact with the top of the stove.• Depending on the material, even IH cookware may not work or may not fully transmit heat.• (H) is marked for pots that are unsuitable to use for cooking.
Stainless steel	Check IH cookware mark	
Heat-resistant glass Ceramic	Do not use	
Aluminum Copper (nickel silver)	Do not use	